

Fire Alarm Monitor Hardware:

Product: Fire Roll Call Monitor


Specification

Communication

Network connection: RJ45 (10/100)

Features

Flash memory supports firmware updates via software
Inputs for connection to fire alarm panel

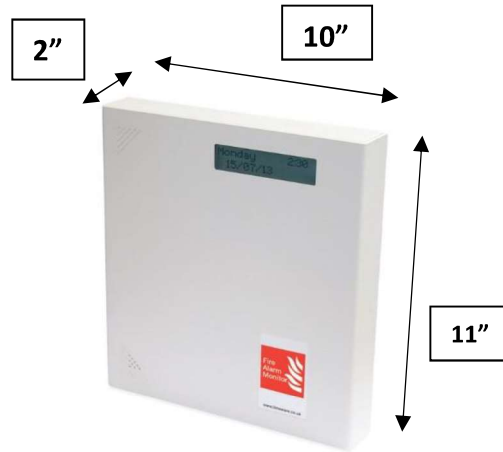

REQUIREMENTS

Fire Panel (Alarm Supplier)

Responsible for supplying 2 core cable link from fire panel to fire roll call monitor.

NB. Alarm Supplier can connect into fire roll call monitor but Addtime unable to go into fire panel without tripping the fire alarm.

Fire Roll Call Monitor (Addtime)

Provides a trigger only with no voltage to enable roll call to print out or send to pre-set emails

IN ORDER FOR THE FIRE ROLL CALL TO BE FULLY ACTIVATED THERE NEEDS TO BE A DRY/SWITCH CONTACT CREATED BETWEEN THIS FIRE MONITOR PANEL AND YOUR FIRE PANEL, THIS CAN ONLY BE HANDLED BY YOUR FIRE ALARM SUPPLIER AND NOT ADDTIME.

All Platinum hardware requires an unswitched fused spare and an RJ45 network point within 2m of where the panel is to be located.